


# NOVA LUCE


9180893

①

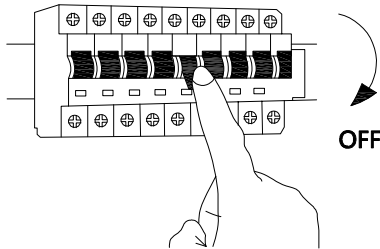


Turn off the general Switch

②

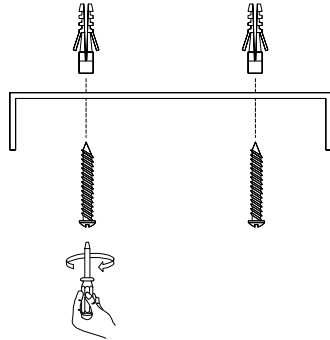


Drill holes & apply plastic anchors  
With screws

③

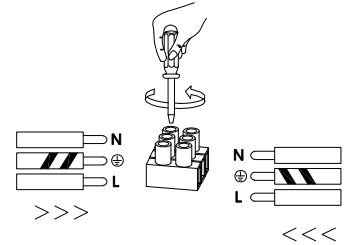


Connect the wires

④

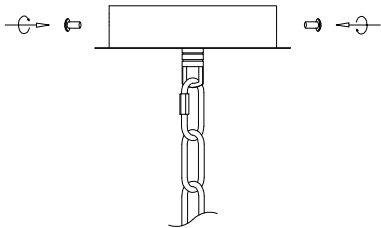


Apply the side screws

⑤

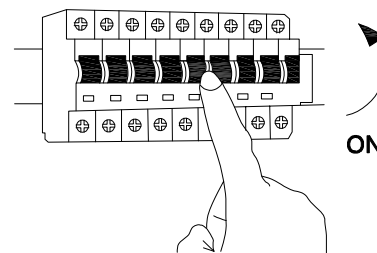

Turn on the general switch

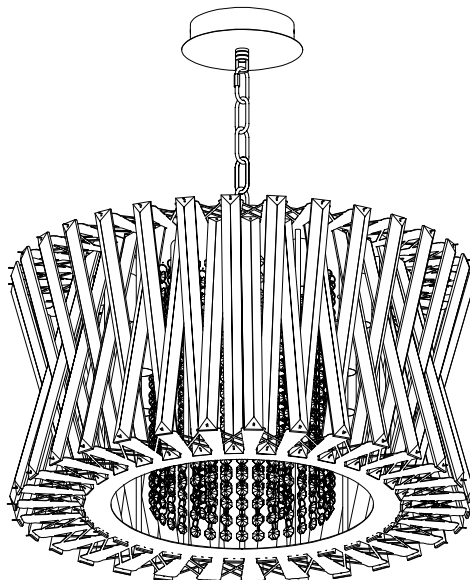

Install crystal  
14 pcs of 14 # crystal=52pcs

