


# NOVA LUCE


9345618

1

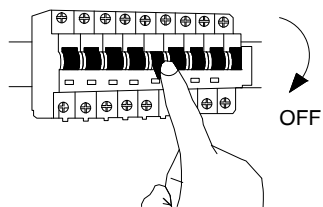


Turn off the general switch

2

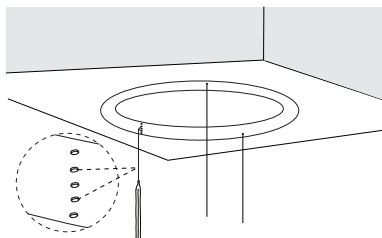


Mark where to drill holes

3

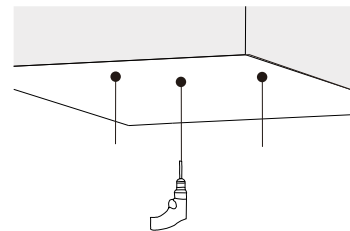


Drill on the marked areas

4

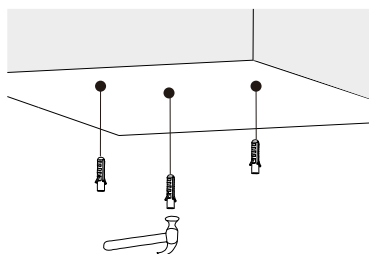


Apply plastic anchors

5

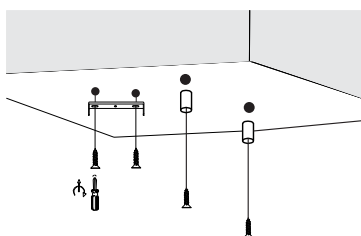


Apply screws

6

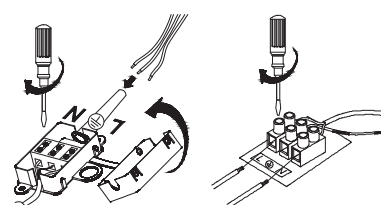


Connect the wires

7

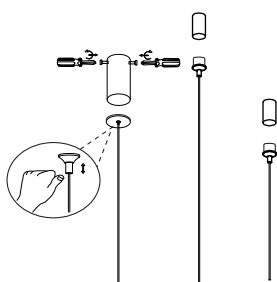


Apply side screws and make hanging elements stable

8

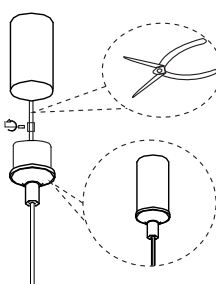

Adjust the wire & fix it into place

9

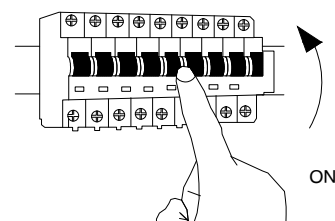

Turn on the general switch

9

