


# NOVA LUCE


9060301 9060302  
9060303 9060304

1

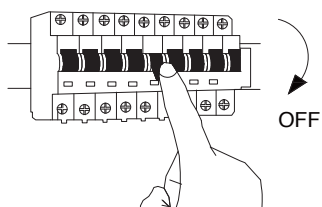


Turn off the general switch

2

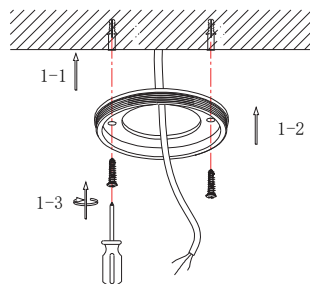


Drill holes apply plastic  
Anchors with screws

3

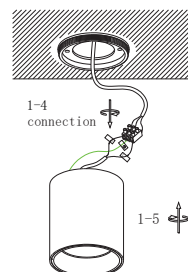

Connect the wires and rotate the  
object to put in place

4

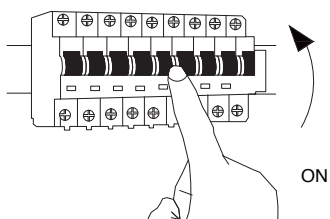

Turn on the general switch

