


# NOVA LUCE


9501210, 9501211

1

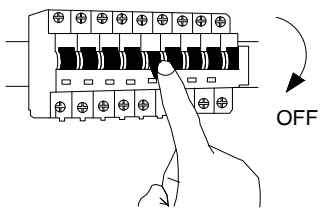


Turn off the general switch

2

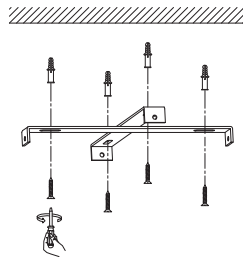


Align, mark and drill holes  
apply plastic anchors & tie up screws

3

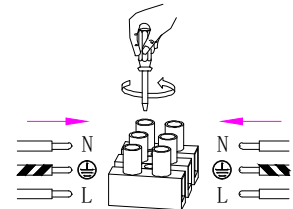


Connect the wires

4

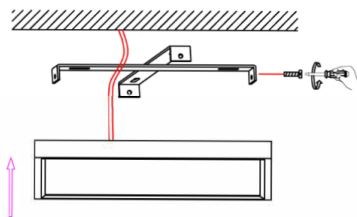

Apply side screws  
to make it stable

5

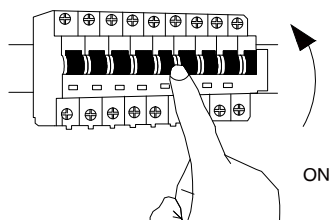

Turn on the general switch

6

