


# NOVA LUCE


1300301312

1

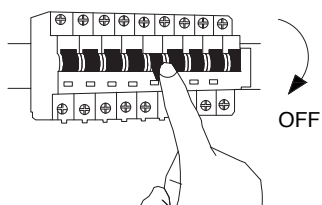


Turn off the general switch

2

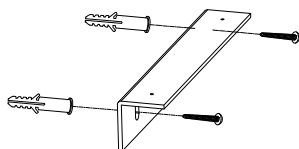


Drill holes & apply plastic anchors  
With screws

3

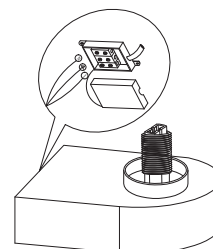


Connect the wires

4

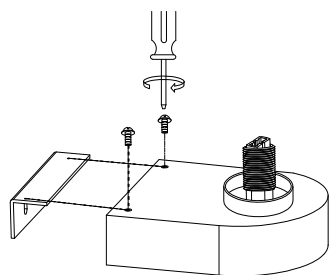


Apply the top nuts

5

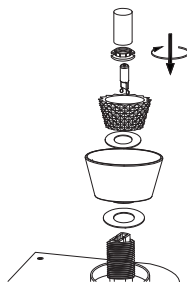

Apply all the elements in line

6

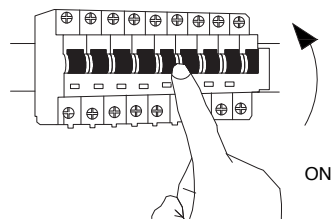

Turn on the general switch

