



# NOVA LUCE


787003 787005

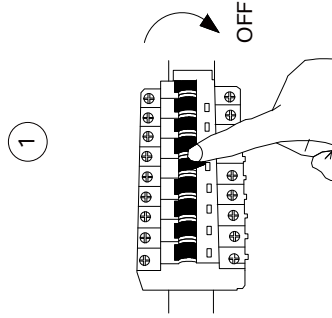


Turn off the general switch

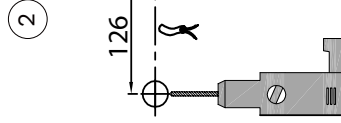


Drill holes & apply plastic anchors  
With screws

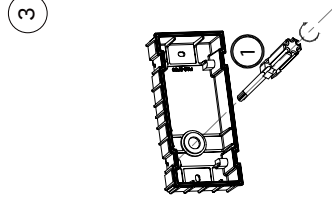


Get the wire through

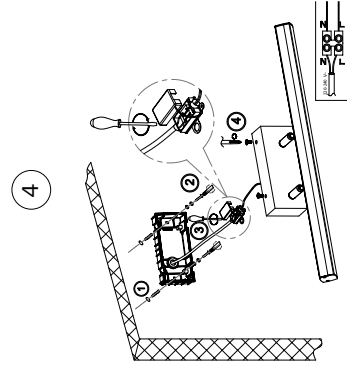


Connect the wires

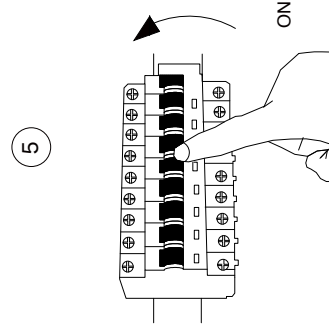


Turn on the general switch

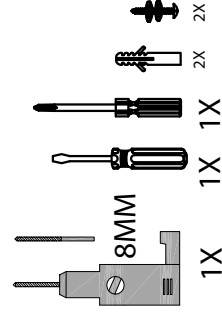

Tools

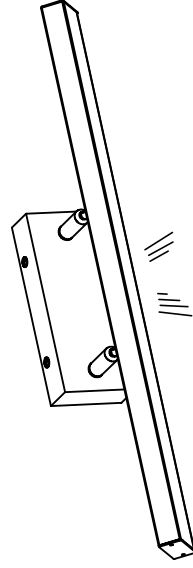

787003

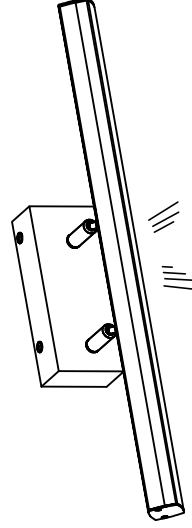

787005

