


# NOVA LUCE


9508431/ 9508432

1

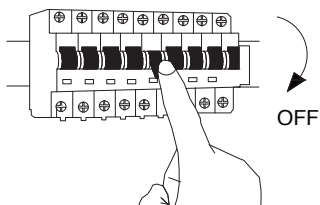


Turn off the general switch

2

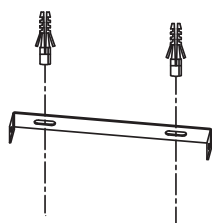


Align, mark & drill holes  
& apply plastic anchors

3

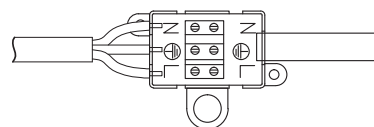


Connect wires

4

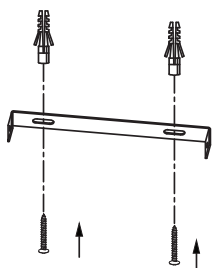


Tie up screws

5

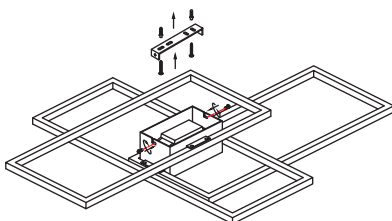

Tie up side screws  
to fix it in place

6

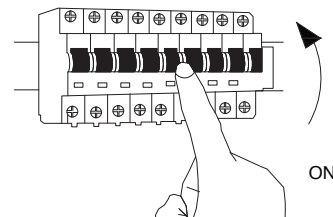

Turn on general switch

