

# NOVA LUCE


9214136 9214137  
9214148 9214149

1




Turn off the general switch

2

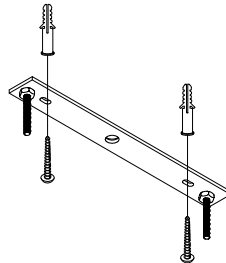


Drill holes & apply plastic anchors  
With screws

3

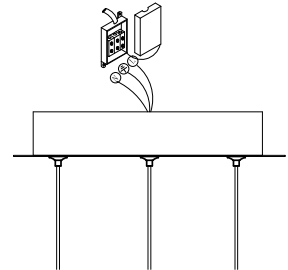


Connect the wires

4

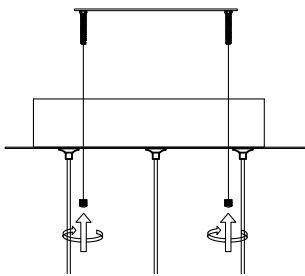

Apply the bottom screws

5

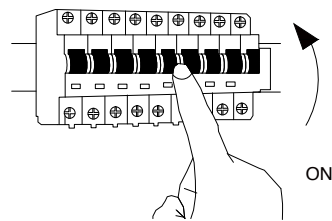

Turn on the general switch

