



NOVA LUCE


9088202

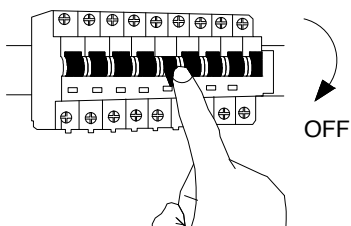


1. Turn off the general Switch

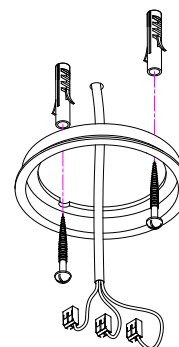


2. Align, mark and drill holes to apply the screws

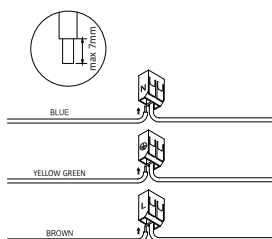


3. Connect the 3 wires

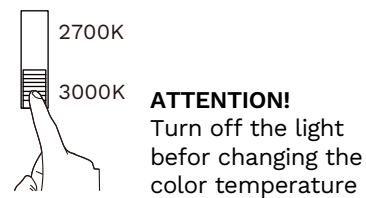

4. changing the color temperature

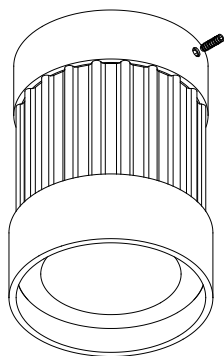

5. Apply the side screws

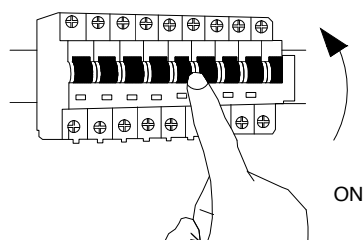

6. Turn on the general Switch

