


NOVA LUCE


9236219 9236220
9236221

1

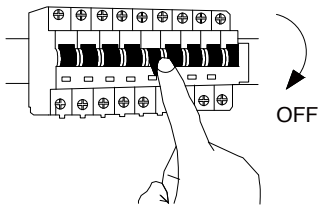


Turn off the general switch

2

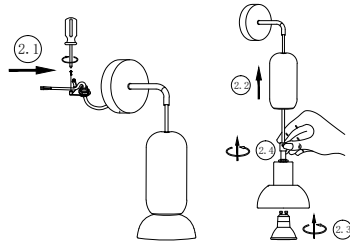


Loose the cord anchorage & let more
Cable out to inset the bulb

3

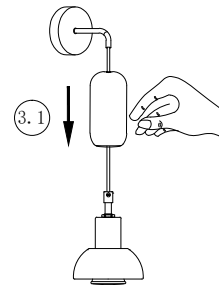


Adjust the cable length

4

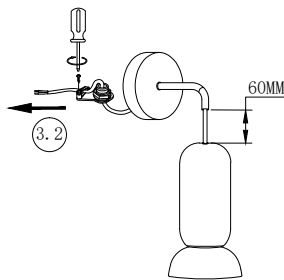


Lock the cord anchorage

5

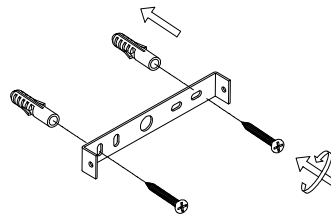


Drill holes & apply plastic anchors
With screws

6

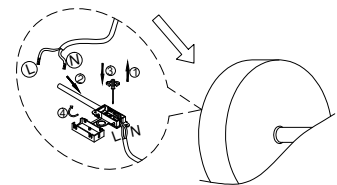


Connect the wires

7

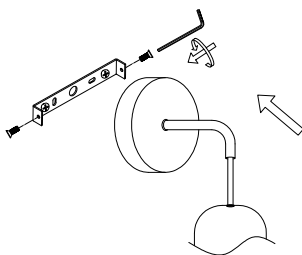

Apply the side screws

8

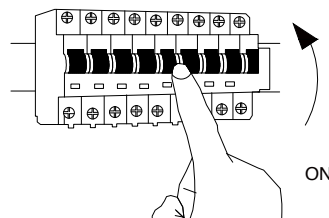

Turn on the general switch

