



NOVA LUCE

9026136 9026137 9026138
9026138 9026139 9026140 9026141

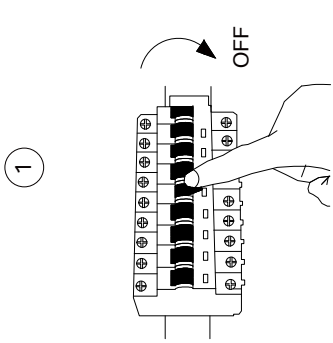


Turn off the general switch

2

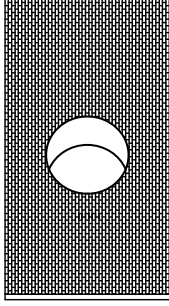


Drill hole

3

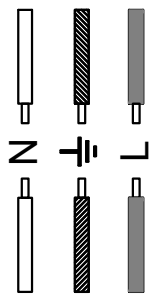


Connect the wires

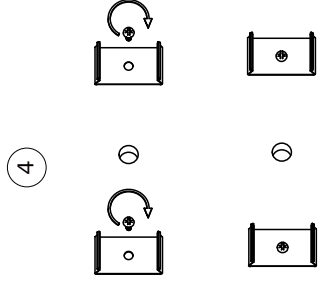


Apply screws

5

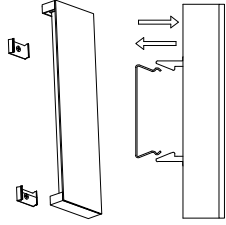

Apply the product in to place

6

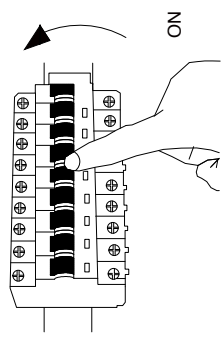

Turn on the general switch

