


NOVA LUCE


9180630

①

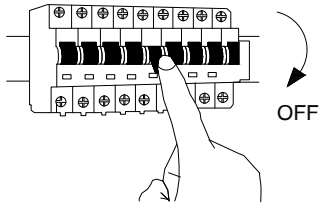


Turn off the general switch

②

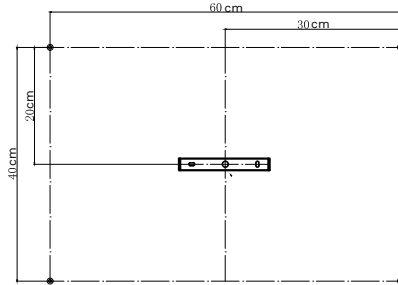


Mark where to drill holes

③

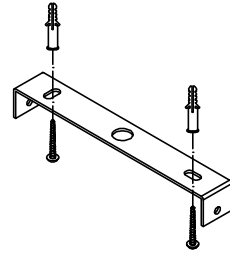


Apply plastic anchors & tie up screws

④

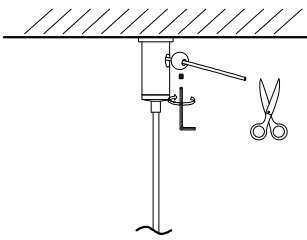


Adjust it correctly

⑤

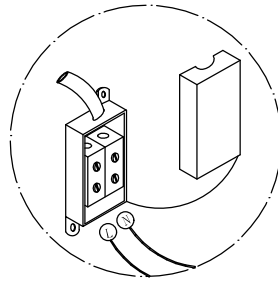


Connect wires

⑥

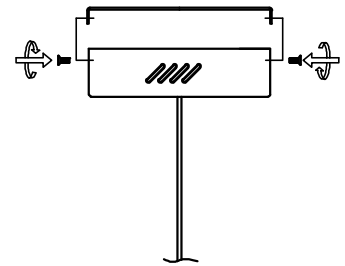

Tie up side screws to make it stable

⑦

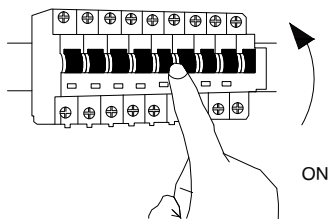

Turn on the general switch

⑧

