


NOVA LUCE


9501246

1

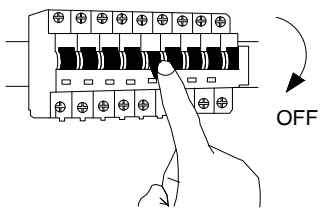


Turn off the general switch

2

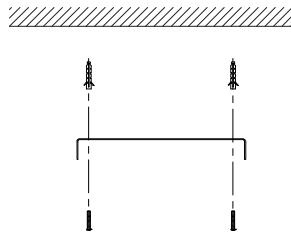


Align, mark and drill holes
apply plastic anchors & tie up screws

3

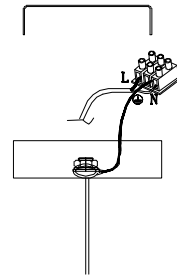


Connect the wires

4

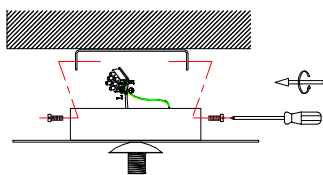


Apply the side screws
To make it stable

5

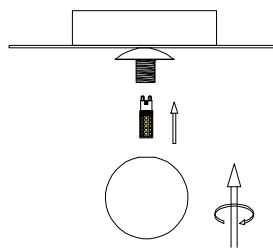

Apply the glass with the bulb

6

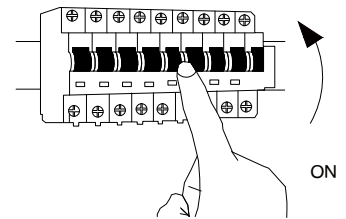

Turn on the general switch

7

