


# NOVA LUCE


9333081

①

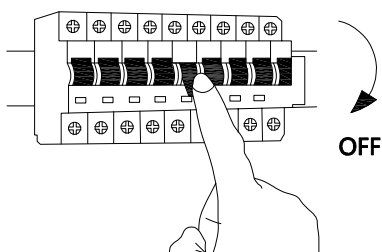


Turn off the general Switch

②

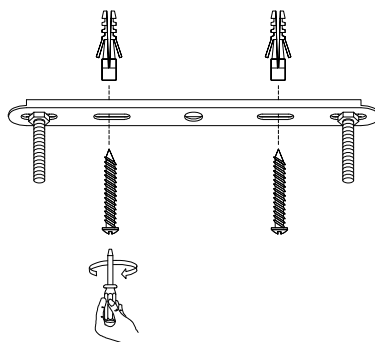


Drill holes & apply plastic anchors  
With screws

③

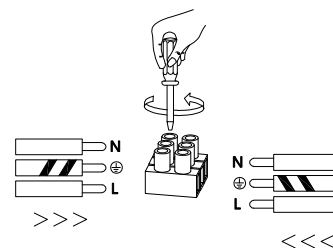


Connect the wires

④

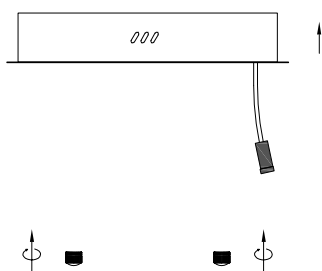


Apply the nut

⑤

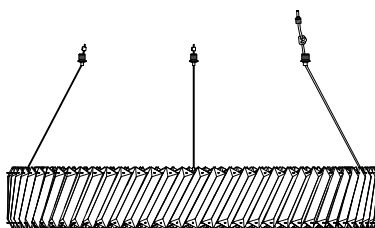

Install crystal lights

⑥

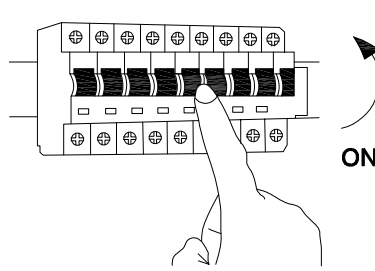

Turn on the general switch

