NOVA LUCE

9236500/ 9236630/ 9236640

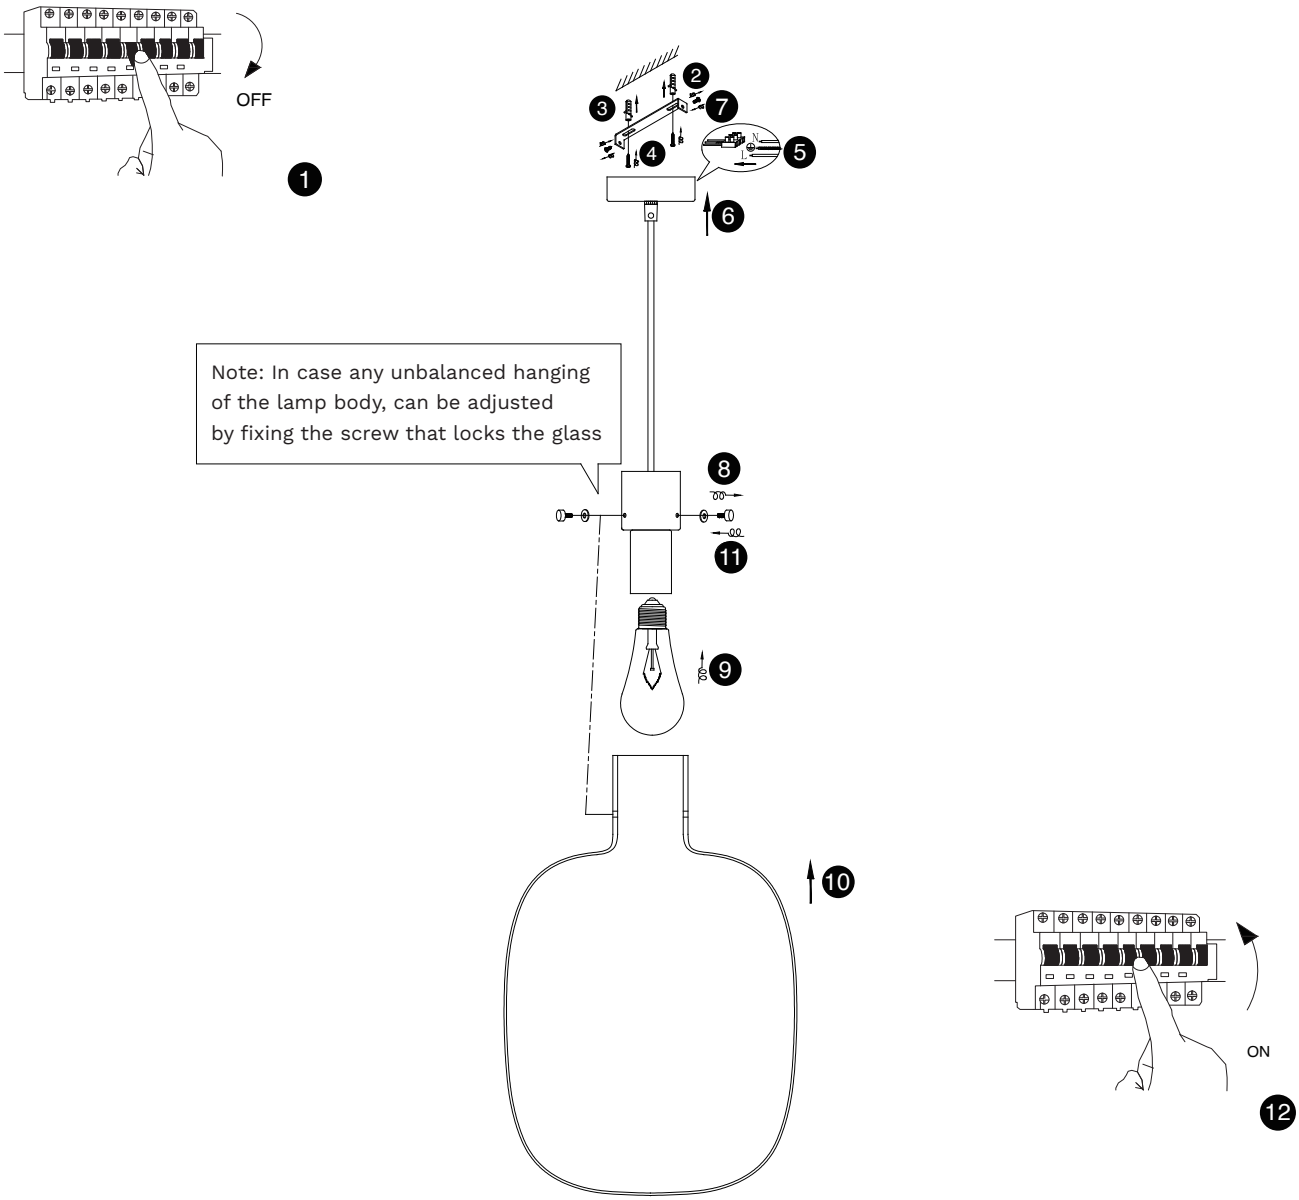

1. Turn off the general switch
2. Untight the side screws
3. Drill holes, appply plastic anchors
4. Apply screws
5. Connect wires
6. Fix the canopy into place
7. Apply the side screws
8. By rotating untight the screws
9. Apply the bulb
10. Put the glass in place
11. Apply the side screws
12. Turn on general switch