NOVA LUCE

9160201

1

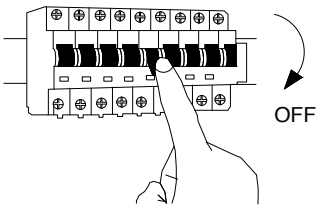

Turn off the general switch

2

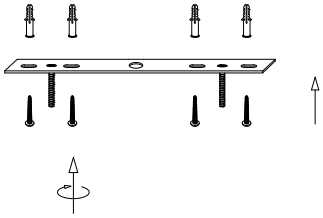

Drill holes & apply plastic anchors
With screws

3

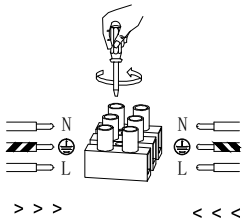

Connect the wires

4

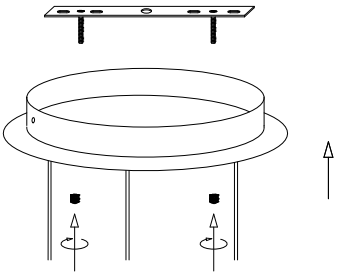

Apply the bottom nuts

5



Apply the glass in to place

6

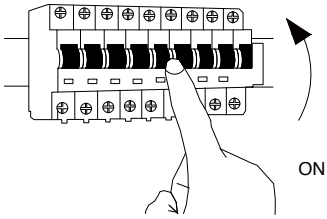

Turn on the general switch

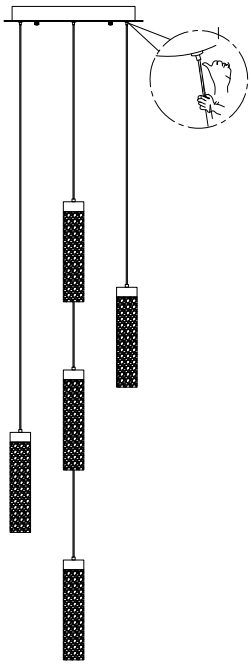

www.novaluce.com